


# No Miter Cut Blocks

**Rosette Block** - Used with fluted mouldings and plinth blocks to form decorative corners around windows and doors eliminating 45° mitre cuts.

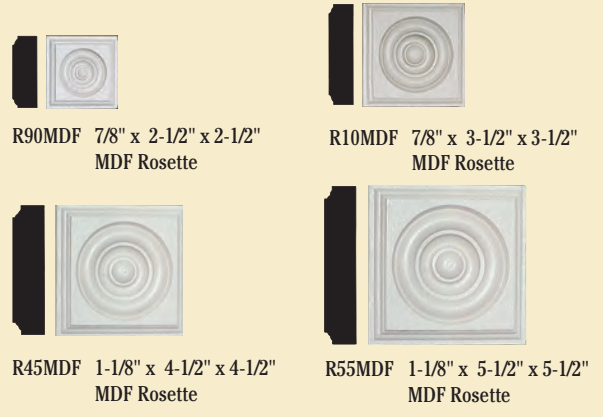

R90MDF 7/8" x 2-1/2" x 2-1/2"  
MDF Rosette

R10MDF 7/8" x 3-1/2" x 3-1/2"  
MDF Rosette

R45MDF 1-1/8" x 4-1/2" x 4-1/2"  
MDF Rosette

R55MDF 1-1/8" x 5-1/2" x 5-1/2"  
MDF Rosette

**Plinth Block** - Used to add a decorative detail where the door trim meets the base moulding.




P255MDF  
7/8" x 2-1/2" x 5"

P458MDF  
1-1/8" x 4-1/2" x 8"  
MDF Plinth

P559MDF  
1" x 5-1/2" x 9-3/8"  
MDF Victorian Plinth

P356MDF 7/8" x 3-1/2" x 6"  
MDF Plinth

**Base Block**  
Corner blocks are used to eliminate difficult 45° mitre cuts on baseboard mouldings.

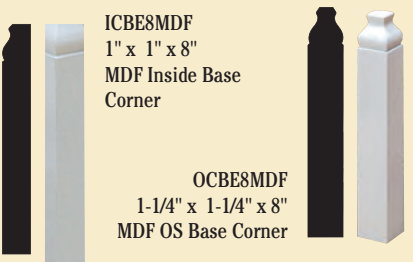

ICBE8MDF  
1" x 1" x 8"  
MDF Inside Base Corner

OCBE8MDF  
1-1/4" x 1-1/4" x 8"  
MDF OS Base Corner

*Imagine the possibilities . . .*



# MDF MOULDINGS



*MEDIUM DENSITY FIBERBOARD  
MOULDINGS FOR DECORATIVE  
FINISHES IN ANY ROOM*



©2007 House of Fara ©2007  
P.O. Box 337 • LaPorte IN 46350  
[www.houseoffara.com](http://www.houseoffara.com)  
HOF#9 HF3001

# Enjoy the smooth, elegant beauty of MDF.



We have taken our unmatched experience and applied it to our new engineered Medium Density Fiberboard (MDF) line.

- Pre-primed ready to paint – excellent for painting
- Made out of engineered wood
- Composite wood – every piece is uniform and straight
- Cuts and nails easily
- Moisture resistant but not designed for exterior use
- Durable and long lasting
- Mitre-less system blocks eliminates difficult cuts when trimming out a room

For a complete listing of mouldings available and decorative ideas, contact House of Fara or pick up a full-line catalog.

**Casing** - Decorative mouldings used to hide gaps between jambs and walls around doorways and windows. Also a great moulding for use as a chair rail.



8587 3/4" x 2-1/2" x 8' MDF Casing

**Fluted Casing** - A fluted casing is simply a moulding with ribs or "flutes" that run the length of the moulding. Fluted mouldings are often used in conjunction with rosette and plinth blocks to trim out doors and windows. Fluted mouldings also make great chair rails.



8581 3/4" x 2-1/4" x 8' MDF Fluted Casing




8583 3/4" x 3" x 8' MDF Fluted Casing



8648 3/4" x 3-1/4" x 8' MDF Reversible Flute




8593 3/4" x 4-1/4" x 8' MDF Fluted Casing

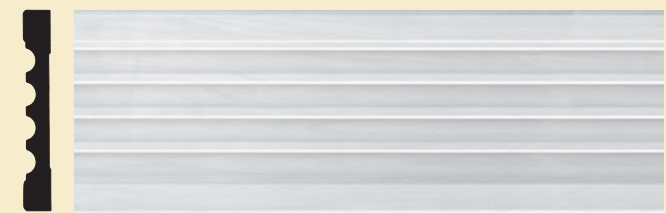


8673 3/4" x 5-1/4" x 8' MDF Flute

**Base Moulding** - A decorative border used where the walls meets the floor. Baseboard is also used to protect walls when vacuuming carpet or cleaning the floors.

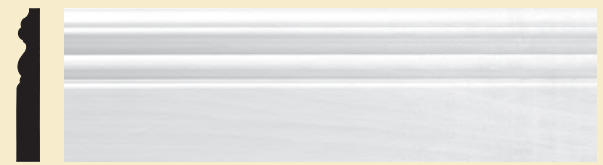

8667 5/8" x 4" x 8' MDF Base

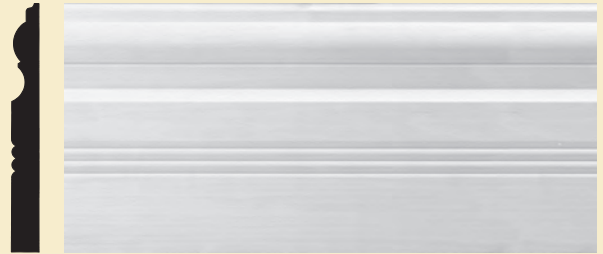


8665 3/4" x 6-1/2" x 8' MDF Victorian Base

**Crown Moulding** - Crown mouldings are used where the walls meet the ceiling. House of Fara 'crowns' create a decorative cornice that adds dimension and character to a room. Crown is the most visible type of moulding. These are also used to build interesting shelves and fireplace mantles.



8659 3/4" x 4-1/2" x 8' MDF Crown

**Detail Moulding** - Small mouldings used for a variety of projects. Some possible uses include decorative shoe, shelf edging, screen moulding, wallpaper border and moulding buildups.

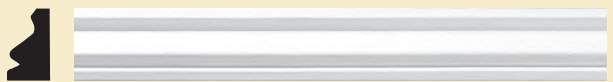

8595 3/4" x 1-1/4" x 8' MDF Shoe